

THESE INSTRUCTIONS  
ARE PROVIDED AS A  
COURTESY BY J&M  
WELL DRILLING, INC.,  
BASED ON OUR  
EXPERIENCES. THERE  
IS NO GUARANTEE OF  
RESULTS AND IT IS  
POSSIBLE THAT THE  
PROCESS MAY NEED  
TO BE REPEATED. J&M  
WELL DRILLING, INC.  
ACCEPTS NO  
RESPONSIBILITY FOR  
THE OUTCOME.




If you have any  
questions of  
concerns, please call  
our office at  
(517) 675-5956

7589 W. Lansing Rd.,  
Perry, MI 48872

[Jmwelldrilling@aol.com](mailto:Jmwelldrilling@aol.com)



**After Your Well Has  
Been Chlorinated...**

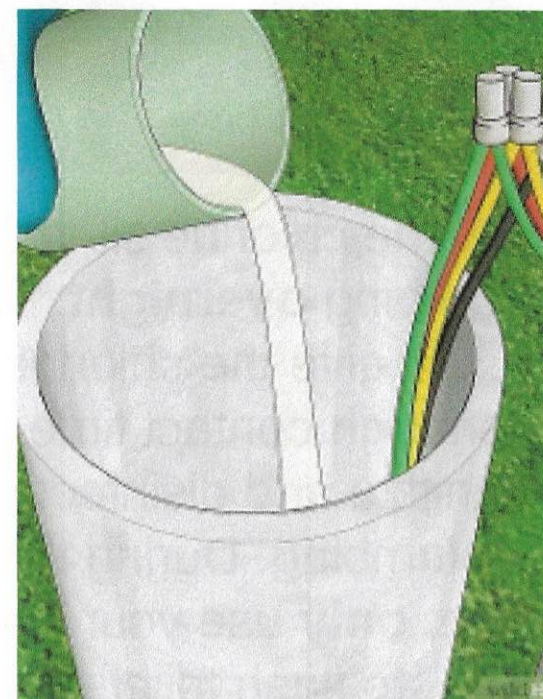

PLEASE READ ALL STEPS  
AND PROCEED AT YOUR  
OWN RISK

Let the chlorine sit in the plumbing **overnight**. This will give the chlorine enough contact time to sanitize and disinfect the plumbing. During this time, **only** use your water to flush toilets.

This process cannot be rushed - doing so may effect the system is allowed to flush, the better.


Hook up a hose to an outside faucet. Make sure to direct the hose away from the house and drain field area. Turn the water on and let it run continuously for **24 HOURS** (can be up to several days). Check the hose periodically for the smell of chlorine.

It is now safe to use the water\*.  
\*If you are chlorinating and sampling for bacteria, the result must be "0" or "Absent". It is **ONLY** safe to drink your water once you have achieved these results.

ON THE FIRST DAY,



THE NEXT DAY,

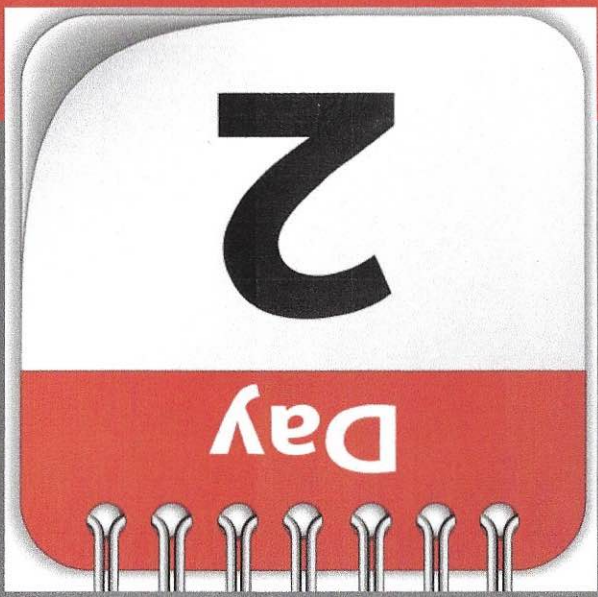

WHEN THERE IS NO LONGER A CHLORINE SMELL PRESENT,

